

General Recommendations for use of Dive Lights

It is recommended to turn light on prior to entering water and turn light off when back on surface. This will reduce the chance of accidentally flooding battery compartment.

Other than battery compartment, do not attempt to dismantle any light.

After use, rinse with fresh water and dry. After drying, remove batteries and inspect battery compartment, checking for moisture. If water were to enter battery compartment, rinse with fresh water, clean and dry. Then place in airtight bag/container with raw rice or silicon absorbent capsules for 24 hours.

Inspect O-rings. Lubricate with silicon grease (not included) as needed. Replace damaged O-rings as needed.

Avoid placing light on beach, sand, or dirt to protect switch.

Keep lights away from children and avoid pointing at yours, or others' eyes.

Warranty Info

Dive Lights: 1 Year

Battery chargers: Six Months

Batteries: Six Months

Warranty does not include:

- A. Battery leakage/flooding damage due to user error
- B. Rough operation or abuse
- C. Commercial/daily use

Proper Use of Comfort Zone Scuba Dive Lights

Rotary Switch lights: The Instructor, Open Diver, Land & Sea, Lil Powerhouse Operation

Battery Installation: Unscrew light head. Inspect O-rings and lubricate or replace if needed. Insert positive (+) battery towards the light head (and repeat if there are two batteries.)

Use: Screw light head back on until light illuminates.

Push Button Lights:

The Divemaster Operation:

Battery Installation: Unscrew tail cap. Inspect O-rings and lubricate or replace if needed. Insert positive (+) battery towards the light head and repeat for 2nd battery. Upon tightening the tail cap, the light will default to low mode. Mash switch to turn off.

Safety Mode: When light is off, after three minutes, the light will go into safety mode. A quick mash will produce a green flash. To unlock, mash switch for 2 seconds and the cycle will start at high mode. Mash and release for low mode, then mash and release to turn off.

Do not fiddle with light head while in water.

Power Indicator:

The built-in power indicator surrounds the switch and informs battery remaining.

- ~ Green, power 30%-100%
- ~ Red, power 10%-29%
- ~ Flashing Red 1%-9%

Advanced Diver Operation:

Battery Installation: Unscrew light head. Inspect O-rings and lubricate or replace if needed. Insert positive (+) battery towards the light head, low level turns on.

Use: Mash button to turn off. Mash button for two seconds and hi beam shall turn on. Mash for another two seconds for low, then mash again for two seconds for strobe. If not used within 3 minutes, light goes into “safety mode” where next mash of button will create a green flash to activate. Simply mash button for 2 seconds where hi beam turns on and back to cycle.

Do not fiddle with light head while in water.

Power Indicator:

The built-in power indicator surrounds the switch and informs battery remaining.

- ~ Green, power 30%-100%
- ~ Red, power 10%-29%
- ~ Flashing Red 1%-9%